


Option 1 - Fitting a blind **INSIDE** a recess

It's just 3 simple measurements!

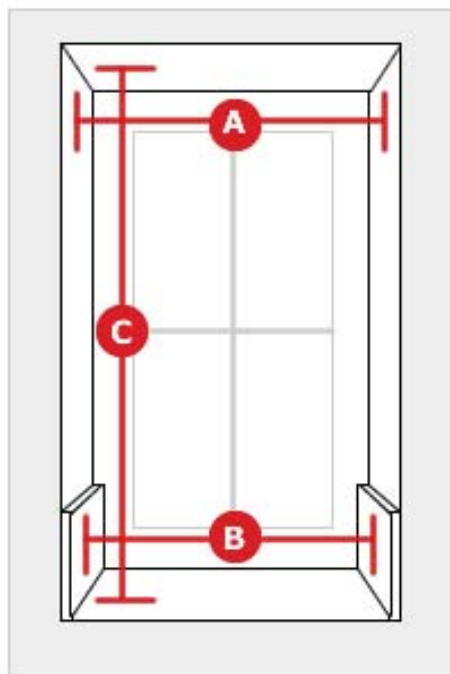


Step 1 - Measure the width inside the recess at the top (**A**) in the position as to where you want the blind to fit. Then also at the bottom (**B**) and then record the smallest measurement of the two. This will allow for obstacles such as dado rails and protruding tiles.

Step 2 - Measure inside the drop (**C**), and record this measurement. Upon receiving these sizes, we will make the necessary allowances to ensure a snug fit!

Option 2 - Fitting a blind **OUTSIDE** a recess

It's just 2 simple measurements!

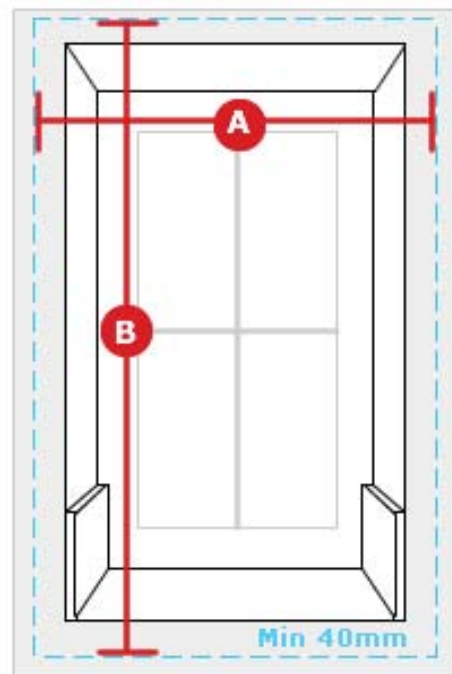

Step 1 - If you would like your blinds to hang outside of your window recess, you will need to decide on the finished size that you would prefer. We suggest that a blind should project at least **80mm** over the whole recess e.g. **40mm** on either side.

Step 2 - Measure and record the finished width (**A**) and the drop (**B**) that you require including the additional **80mm** minimum. We will then make your blinds exactly to those measurements.